




Use the clamps to cut trough the plastic pulley. Take great care to not damage the webbing of the riser.



Take away the pulley.

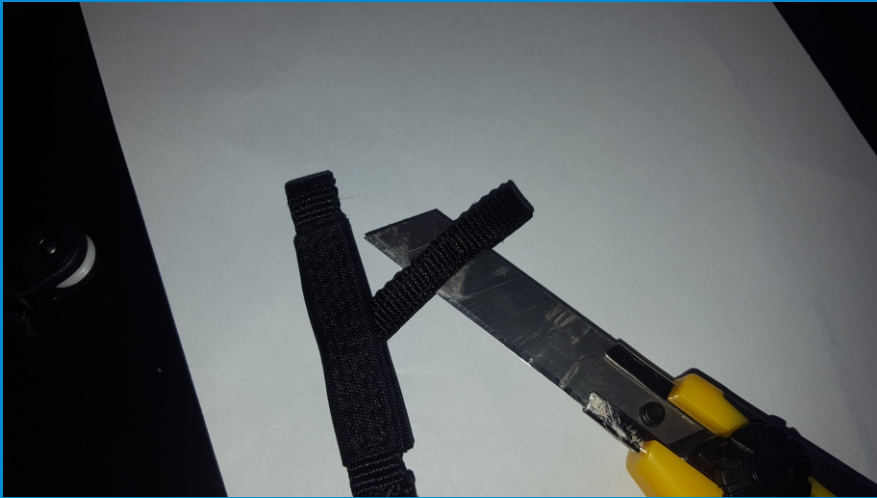

Use the Olfa or any flat knife and cut through the sewing of the webbing on the brake pulley loop attachment.

Do this for 1.5 cm



Put the new webbing through the new pulley.



Pull the loop over the pulley and make tension with the help of a line.